













TRADE MARK
REG. U.S. PAT. OFF.

1930





SMITH & WESSON

357



38 S. & W. SPL.

MADE IN U.S.A.
S. & WESSON
FIELD, MASS.





36557



Chess St

ued

ROUND BUTT

ch

DIRECTIONS FOR USE.—Grasp the stock of the arm with the right hand and with the thumb push the thumb-piece forward, then press the cylinder to the left. Place the charges in the chambers and return the cylinder to its place when the arm is ready for use.

To Eject the Empty Cartridge Cases.—Swing the cylinder to the left as before, and while holding the muzzle elevated, push rearwards on the ejector rod with the disengaged hand. Release the ejector rod; the ejector will return to its former position, and the arm is ready to reload.

To Remove an Exploded Shell.—After having swung the cylinder to one side, as before directed, press upon the ejector rod sufficiently to start the cartridges from the chamber, when the exploded shell may be removed.

To Remove the Cylinder.—Loosen the forward side plate screw, and the yoke and cylinder may be withdrawn from the frame.

In Ordering parts for repairs, return the broken or damaged pieces.

Ammunition.—Factory-loaded, smokeless powder cartridges with plain lead bullets are recommended.

Experience shows that metal patched bullets are frequently responsible for barrel trouble.

Address,

SMITH & WESSON, Springfield, Mass., U. S. A.

Para cargar. Teniendo el arma en la mano derecha, empújese el pasador del tambor con el pulgar, y échese el tambor a la izquierda. Méntense los cartuchos en sus puestos y vuélvase el tambor a su posición primitiva.

Para expeler cápsulas usadas. Echese el tambor a la izquierda, como arriba mencionado, y, teniendo la boca del cañón por arriba, con la otra mano muévase hacia atrás el piston del extractor. Sueltese el piston, entonces el ejector se vuelva a su propio puesto, y el arma quedará lista para recargar.

Para sacar una cápsula usada. Echese afuera el tambor según los direcciones anteriores, y empújese un poco el piston del extractor entonces se encontrará fácil de quitar la cápsula usada.

Para sacar el tambor. Aflojese el tornillo delantero de la chapa lateral y fácilmente puede quitarse.

Piezas de Repuesto. Al pedir piezas de repuesto siempre es conveniente devolver las gastadas o dañadas que han de reponerse.

Cartuchos. Recomendamos para el uso en nuestros revólveres solamente los cartuchos fabricados por casas de reconocida reputación, y cargados con pólvora sin humo con balas de plomo sencillo.

Es nuestra experiencia que los cartuchos con balas endurecidas y las cubiertas o forradas con acero son la causa de casi todos los daños que sufren los cañones.

Dirección,

SMITH & WESSON, Springfield, Mass., E. E. U. U.

Helpful Hints

for the greater effectiveness
enjoyment of your

Smith & Wesson Revolver

INSTRUCTIONS FOR OPERATION

1. Push thumb piece forward and load.
2. Close cylinder and take position.



3. STAND in a relaxed and comfortable position with feet well apart. The arm when raised will be in line naturally with the target. If it is necessary to shift the feet a bit.





